


MANUAL REMOTE CONTROL ARJES EKOMAXX 800





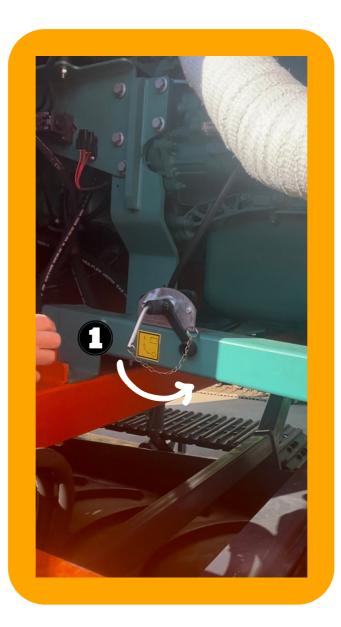

When the shredder is not in use, the main switch must always be turned off for safety reasons. When starting the machine, first turn the switch to the open position.





Emergency stop on/off

Before starting the Arjes Ekomaxx 800, it is important to deactivate the emergency stop. Turn the emergency stop button until it pops up.



Transmitter on

Then press the green button at the bottom left. You will hear a signal sound on the machine, indicating that the transmitter and receiver are activated, and consequently, the remote control is activated.





Setting the remote control to level 2.

Use the designated button to switch between level 1 and level 2:

- Level 1 includes both automatic and manual functions.
- Level 2 includes only manual functions.

When the operational indicator light is on level 2, the green LED at the top will be lit.





Start engine

Now, in level 2, you start the engine by pressing the designated button.





Functions level 2

If level 2 is activated, you can operate the machine based on the green icons. This allows you to raise and lower the machine, move the axes forward or backward, move the conveyor belt forward or backward, start the engine, unfold and fold the conveyor belt, and switch back to level 1.





Functions level 1

To switch back to level 1, repeat step 3. The indicator light will now turn yellow. In level 1, you can drive the machine to the left or right, both forward and backward. You can also perform a 100% rotation, lift and lower the magnet, and move the tipping hopper up or down.





Switch off shredder

Finally, to turn off the shredder, press the red button at the bottom right. This will disconnect the connection between the transmitter and the receiver.